





# Installation Instructions

## What you will need:

Screwdriver or tool handle

*(Use necessary safety precautions during installation)*

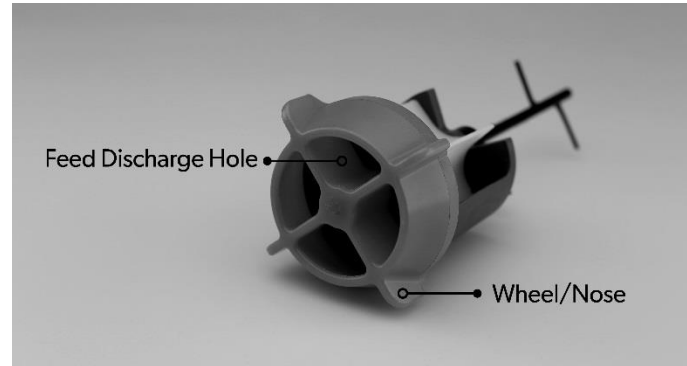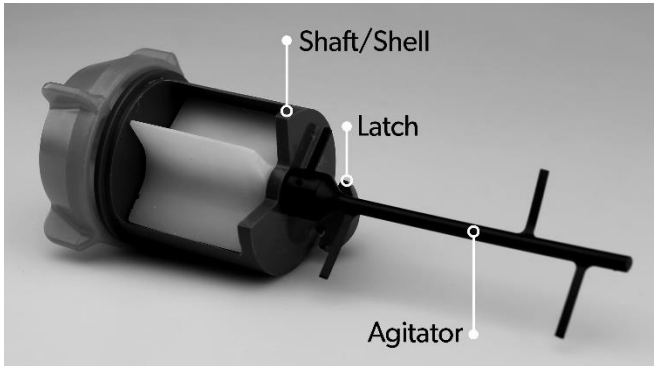

## To install MealMeter:



**ENSURE THERE ARE NO FOREIGN OBJECTS IN FEED TUBE PRIOR TO INSTALLATION.**

1. Position MealMeter so the latch is to the sow's side of the riveted stud.





ALWAYS INSTALL WITH TOOL HANDLE AS USE OF FINGERS COULD CAUSE BODILY INJURY.

USE PRECAUTION WHEN INSTALLING AND REMOVING WITH SOW IN STALL

2. Place screw driver in hole to lever shell toward the riveted stud. The MealMeter cannot latch without activating and locking the inside shell with the nose.

3. Turn MealMeter wheel toward riveted stud.
4. You will feel and hear a slight click. If you do not feel or hear a slight click, turn the MealMeter with the screwdriver in the hole in the opposite direction with less pressure. If there is resistance, the MealMeter is properly installed.



5. Begin using MealMeter.

# Preparing MealMeters for Feed Tubes

## Agitator Length:

- The agitator needs to be cut to accommodate different feed tube designs.
- Cut the agitator so the stem nearly touches the back vertical wall of the feed tube without bending.



## Feed Tube Requirements



### Feed Tube Condition:

- 3in OD, 16 gauge wall thickness
- No distortions or seams in the bottom 3-4in of tube (straight 3-4 inches)
- Perfectly round



### Feed Tube Position:

- 45 degree upward bend
- Bottom of the MealMeter needs to be 6-8in from bottom of trough
- 90 degree angle from sow

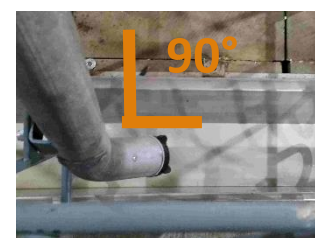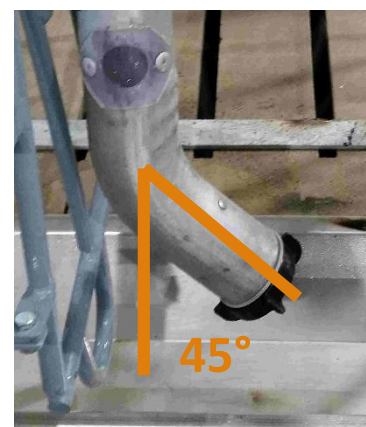

### Stud Placement:

- $2^{29/32}$ " On Center from bottom of tube
- Stud should be in the 12 o'clock position (Top Dead Center) as the tube will be positioned in the stall. (A tube that is mounted in a sloped front crate will have a different position in reference to the bend than will a straight front crate.)
- Diameter is  $3/16$ in

### Other Requirements:

- Water needs to be out of the trough (For watering bracket, see SnoutSpout nipple bracket)
- Must use feed box above drop tube in order to manage intake



*In the event your current feed tubes do not meet all of these requirements, PigEasy manufactures retrofit full length or short tubes to slide onto current feed tubes. For more information, call PigEasy at 888-354-0112.*

## **Instruction Manual Disclaimer**

The following information should be reviewed carefully prior to use of the product as it affects your safety and legal rights. Failure to read and follow instructions and warnings may result in serious injury or damage to the product or other objects. These instructions are subject to change at the sole discretion of PigEasy and users should check the following website for the latest up-to-date instruction manual: [www.pigeasy.com](http://www.pigeasy.com). The purchaser agrees by using the product to the terms and conditions set forth below.

**PigEasy's products are not consumer products and are intended only for those in the swine industry and should be used according to the instructions set forth herein for the specific designed purpose for such product. Serious injury or damage can result from (1) improper use, application or installation, (2) as part of improperly designed or constructed assemblies with defective adjacent materials or equipment, or (3) failure to follow applicable specifications, instructions and details. PigEasy sells its products "AS IS" and hereby disclaims all liability and warranties express or implied except for the limited written warranty set forth below issued to the original purchaser of the product. PigEasy assumes no responsibility that its products will be fit for merchantability or any particular purpose. To the extent allowed by applicable law, PigEasy shall not be liable for any direct, incidental, consequential, exemplary, punitive or indirect damages (including lost profits) arising out of use of its products.**

This product is warranted by PigEasy, LLC ("PigEasy") to be free from defects in materials and workmanship for a period of one year commencing from the date of purchase when used for its intended purpose and in accordance with the product's instruction manual. PigEasy's obligation under this warranty is limited to the repair or replacement, in PigEasy's sole discretion, of the applicable components. This limited warranty shall only apply to defects that are reported to PigEasy within the applicable warranty period and which, upon examination by PigEasy, prove to be defective. This limited warranty does not cover and PigEasy shall not be liable for the following: (1) defects, damage, or other conditions caused, in whole or in part, by misuse, abuse, negligence, alteration, accident, freight damage, tampering, or failure to seek and obtain repair or replacement in a timely manner; (2) products which are not used in accordance with their instructions; or (3) accessories or parts not manufactured by PigEasy. THIS LIMITED WARRANTY IS PIGEASY'S ONLY WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. PIGEASY MAKES NO IMPLIED WARRANTIES OF ANY KIND INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS.